



 
 




 




How To	Do This	Display	Comments
Silence buzzer	<p>Silence Buzzer</p>  <p>Press button</p>		Buzzer will resound on next event.
Test lamps	<p>Lamp Test</p>  <p>Press button</p>	All lamps and display on	Buzzer sounds whilst button is pressed
Enable Level 2 Access	<p>Enable Control</p> <p>Open the Access Door</p> 	Display shows ACCESS LEVEL 2	
Silence alarms	<p>Silence Alarm</p>  <p>Press button</p>		Sounders will resound on the next alarm. Buzzer will resound on the next event.
Sound alarms	<p>Re-Sound Alarm</p>  <p>Press button</p>		Buzzer pulses rapidly
Reset	<p>Reset</p>  <p>Press button</p>		Alarms MUST be silenced before resetting. Ensure source of fire event is cleared before resetting.
Disable a zone in Alarm	<p>Disable</p>  <p>Press button</p>		Zone MUST be silenced before disabling.
Disable a zone	<ul style="list-style-type: none"> Obtain Level 2 Access by opening the Access Door. Press an arrow key. Use the Up/Down keys to point to "Disablement/Select Delays" Press the right Arrow Use the Up/Down arrows to point to "Disable Zones" Press the right arrow. Use the Up/Down arrows to point to the required Zone. Press the right arrow. Press Enter 	 <p>Zone XX – Disabled Zone</p>	

How To	Do This	Display	Comments
Put a zone into test mode.	<ul style="list-style-type: none"> Obtain Level 2 Access by opening the Access Door. Press an arrow key. Use the Up/Down keys to point to "Test Zones" Press the right Arrow Use the Up/Down arrows to point to "Test Zones" Press the right arrow. Use the Up/Down arrows to point to the required Zone. Press the right arrow. Use the Up/Down arrows to select Sounders ON or OFF Press The right Arrow Press Enter 		
Enable a disabled Zone or Sounder	<ul style="list-style-type: none"> Obtain Level 2 Access by opening the Access Door. Press an arrow key. Use the Up/Down keys to point to "Disablement/Select Delays" Press the right Arrow Use the Up/Down arrows to point to "View & Restore Disablements" Press the right arrow. Use the Up/Down arrows to point to the required item. Press Enter 		
Disable sounders	<ul style="list-style-type: none"> Obtain Level 2 Access by opening the Access Door. Press an arrow key. Use the Up/Down keys to point to "Disablement/Select Delays" Press the right Arrow Use the Up/Down arrows to point to "Disable Sounders" Press the right arrow. Press Enter 	 <p>Sounders Disabled</p>	
Activate/De-Activate delays	<ul style="list-style-type: none"> Obtain Level 2 Access by opening the Access Door. Press an arrow key. Use the Up/Down keys to point to "Disablement/Select Delays" Press the right Arrow Use the Up/Down arrows to point to Activate/De-Activate Delays Press the right arrow. Use the UP/Down arrows to select local or all nodes Press the right arrow. Press Enter 		No Delayed Outputs will be displayed if there are no delays set.
Return system to normal	Close the Access Door		Secures the system against unauthorised operation.
For service contract:		Telephone:	