


When Programming a Syncro AS fire alarm panel, please note

- Use LD/SYNCRO cable only
- A USB to serial converter will be required if your PC doesn't have a serial port (available from Incite Fire, if required – Part No: LD/USB-DB9-WIN7). Please ensure this is working with the correct drivers before attending site.
- Note the programming port location below. Do **NOT** plug into any other connector on the back of the PCB (specifically the Printer port) or you may cause permanent damage to the Fire Panel.
- Please ensure if you have the Notifier 3030 NFN Gateway installed on your computer that this is disabled **before** connecting to the Syncro Panel.

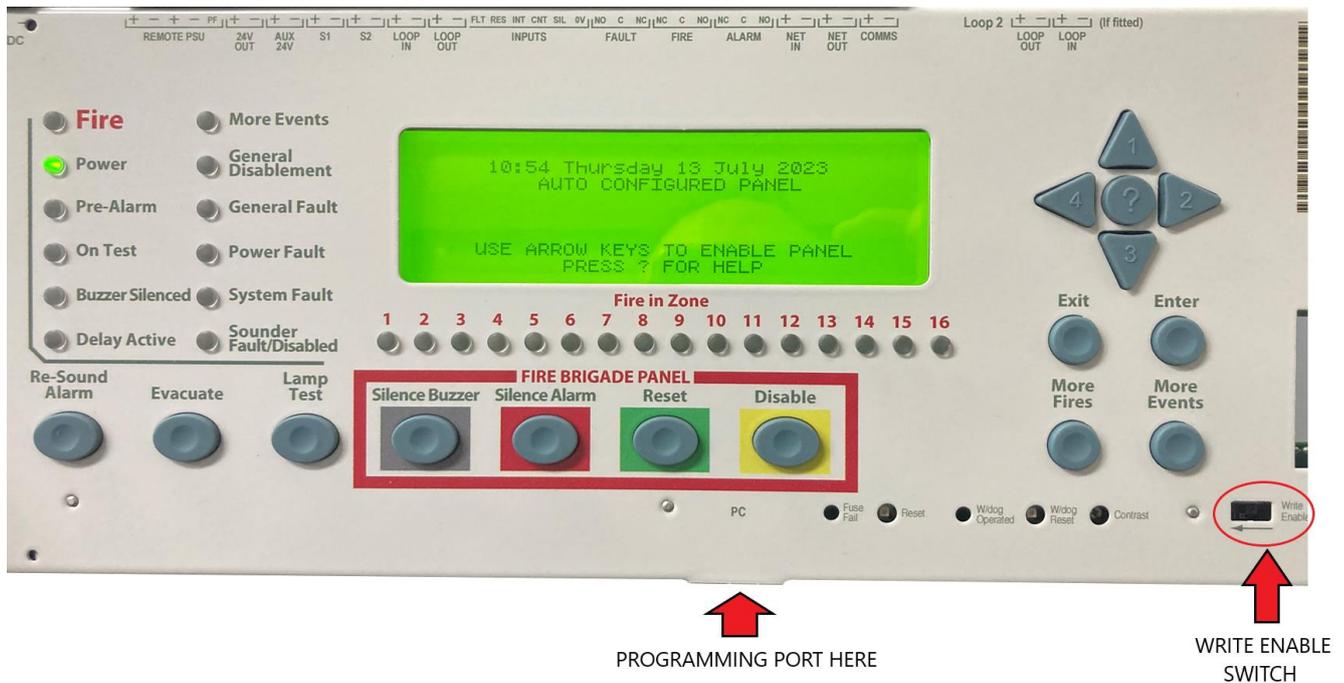

PROGRAMMING PORT HERE

WRITE ENABLE SWITCH