



**EK-WL8-TRH/AU
WIRELESS TRANSLATOR
MODULE**

STFV.425551.070-AU-UM rev. 8

20.07.2021

Page 1 of 23



	EK-WL8-TRH/AU WIRELESS TRANSLATOR MODULE	
STFV.425551.070-AU-UM rev. 8	20.07.2021	Page 2 of 23

CONTENTS

GENERAL DESCRIPTION	3
TECHNICAL SPECIFICATIONS.....	4
FEATURES.....	4
CONSTRUCTION	5
STRUCTURE	7
INSTALLATION	9
SYSTEM TOPOGRAPHY	10
WIRING.....	11
ACCESS PERMISSION	12
CREATING A NEW SYSTEM.....	13
CHOOSING THE RADIO PROTOCOL TYPE	14
ADD/DEL DEVICES.....	14
CHANGING THE START ADDRESS OF THE TRANSLATOR	15
ADDRESSES CROSS-MAPPING.....	16
EKHO DEVICES AND ESP DEVICES TYPES.....	16
PARAMETER EDITING.....	17
MAINTENANCE	19
WARRANTY	20
APPENDIX A.....	21

	EK-WL8-TRH/AU WIRELESS TRANSLATOR MODULE	
STFV.425551.070-AU-UM rev. 8	20.07.2021	Page 3 of 23

GENERAL DESCRIPTION

- The “wire to wireless” translator module is a device which interfaces the hard-wired Hochiki Enhanced Systems Protocol (ESP) loop to the Ekho wireless system. This allows connection of fire detection devices based on the Ekho wireless communication protocol for monitoring and control.
- The translator is powered directly by the analogue loop and incorporates a loop short circuit isolator. It is designed to be used with control panels that implement the Hochiki ESP protocol (*Panel compatibility needs to be checked with the manufacturer*).
- The translator is supplied with a mounting kit (an optional back box is available EK-BOX-01)
- The product complies with the requirements of the AS ISO 7240.17, AS ISO 7240.18 and AS ISO 7240.25 standards.

NOTE

Ekho refers to a family of addressable, wireless, analogue-intelligent devices. These devices communicate with the translator module wirelessly using the “Ekho” protocol. This allows the control panel to manage and control wireless devices as if they were a part of its loop.

	EK-WL8-TRH/AU WIRELESS TRANSLATOR MODULE	
STFV.425551.070-AU-UM rev. 8	20.07.2021	Page 4 of 23

TECHNICAL SPECIFICATIONS

Loop Supply Voltage (low)	from 17V _{dc} to 32V _{dc}
Loop Pulse Voltage	from 7 V _{dc} to 9 V _{dc}
Quiescent Current	31mA (at 41V _{dc})
Loop current (when polled)	22mA±20%
Radio frequency	918-926 MHz
Radio signal modulation type	GFSK
Number of frequency channels	6
Radiated power	Not more than 25 mW
Receiver category (EN300-220-1)	1.5
Communication range with a wireless expander device	2000 m (in open space)*
Communication range with other wireless devices	1000 m (in open space)**
Maximum linked wireless expanders	126*
Maximum linked wireless child devices	126*
Temperature range	from -10°C to +55°C
Tolerated humidity range (no condensation)	to 95 % RH at 40 °C
Dimensions	210mm × 145mm × 40mm
Number of antennas	2
Weight	300g

**Dependent on system/control panel capacity*

NOTE Check the latest version of the product specification document STFV.425551.070-E-PS for further data, obtainable from the manufacturer.


FEATURES

- Allows connection Ekho wireless devices onto the Hochiki ESP protocol
- Up to a maximum of 10 translators can be connected to a loop*
- Up to a maximum of 126* child devices linked to a single translator
- Emulates ESP counterpart devices on behalf of wireless devices
- Loop powered
- Wireless system reset via ESP commands
 - **Dependent on system/ control panel capacity*


- Communicates the wireless devices low battery and tamper conditions to the control panel
- Integrated short circuit isolator
- Two internal antennas
- OLED graphical display 96x64 dots embedded

CONSTRUCTION

To open the cover, remove the two rivet snaps by gently pulling on the two cover clips.

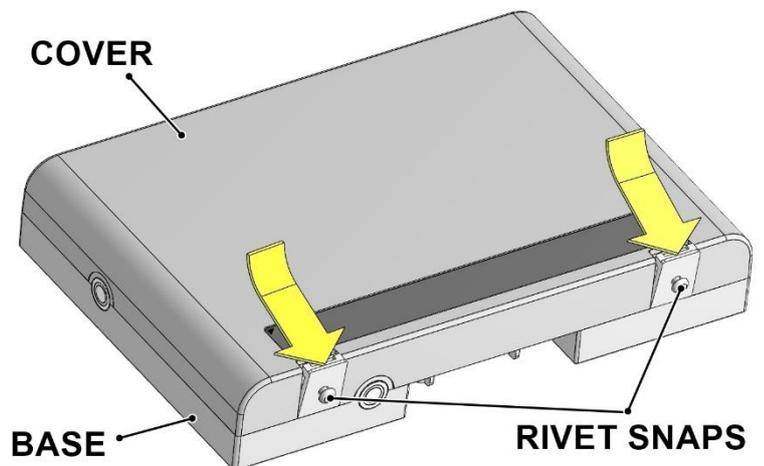


In order to close the cover, first hook the cover onto the back plate, and apply pressure until the cover clicks into place.

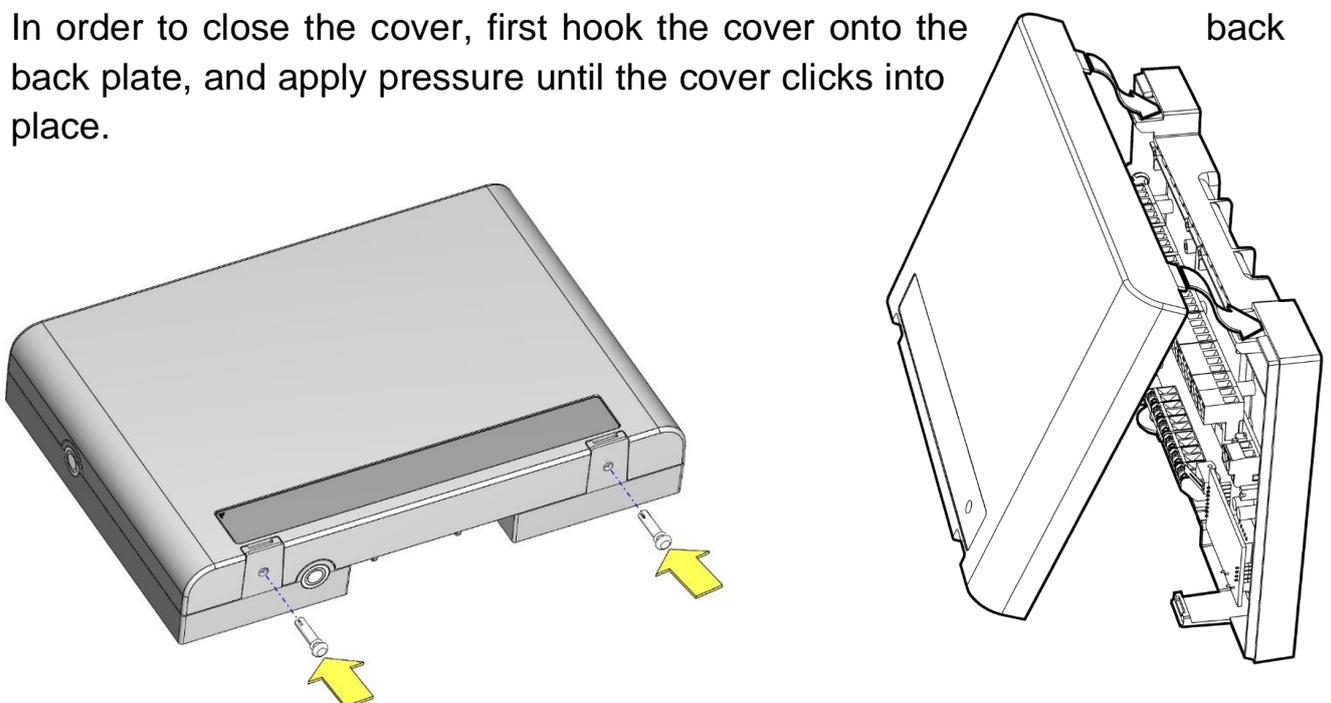

To secure the cover, you should insert the two rivet snaps into the holes.

	EK-WL8-TRH/AU WIRELESS TRANSLATOR MODULE	
STFV.425551.070-AU-UM rev. 8	20.07.2021	Page 6 of 23


Dimensions:

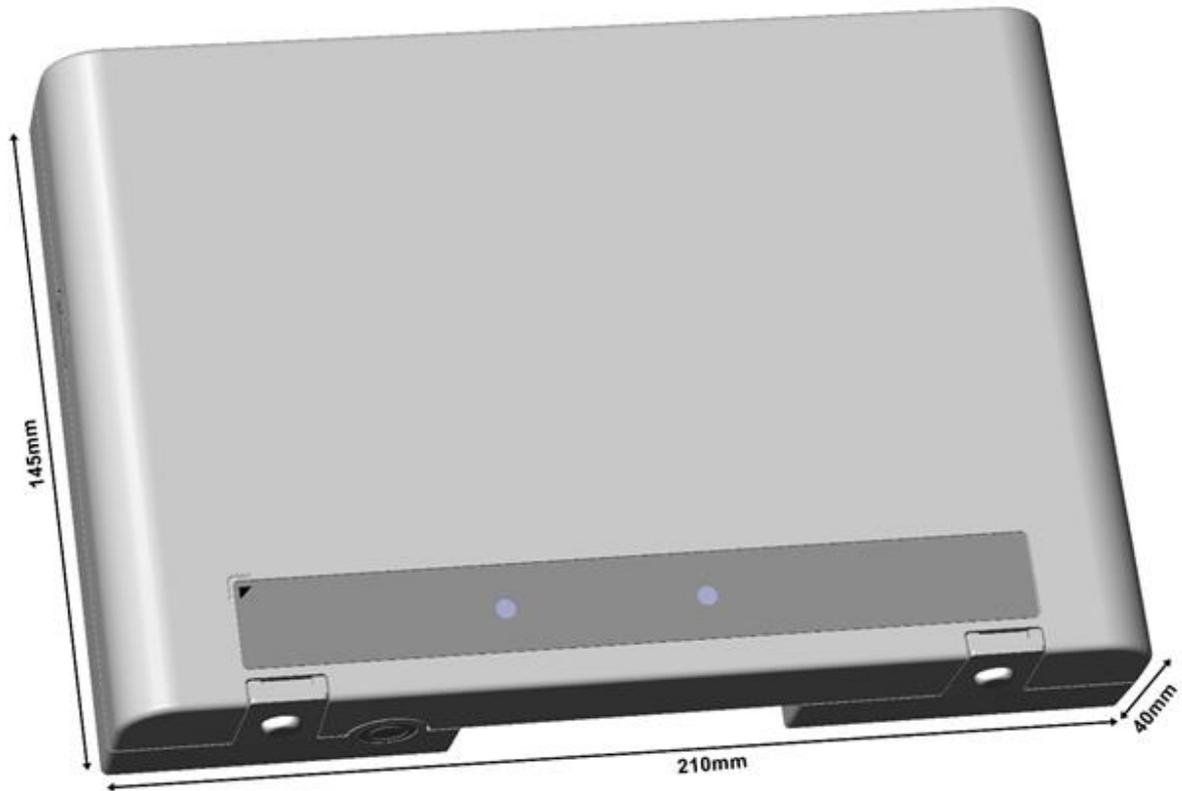

ekho	EK-WL8-TRH/AU WIRELESS TRANSLATOR MODULE	
	STFV.425551.070-AU-UM rev. 8	20.07.2021

STRUCTURE

EK-WL8-TRH board

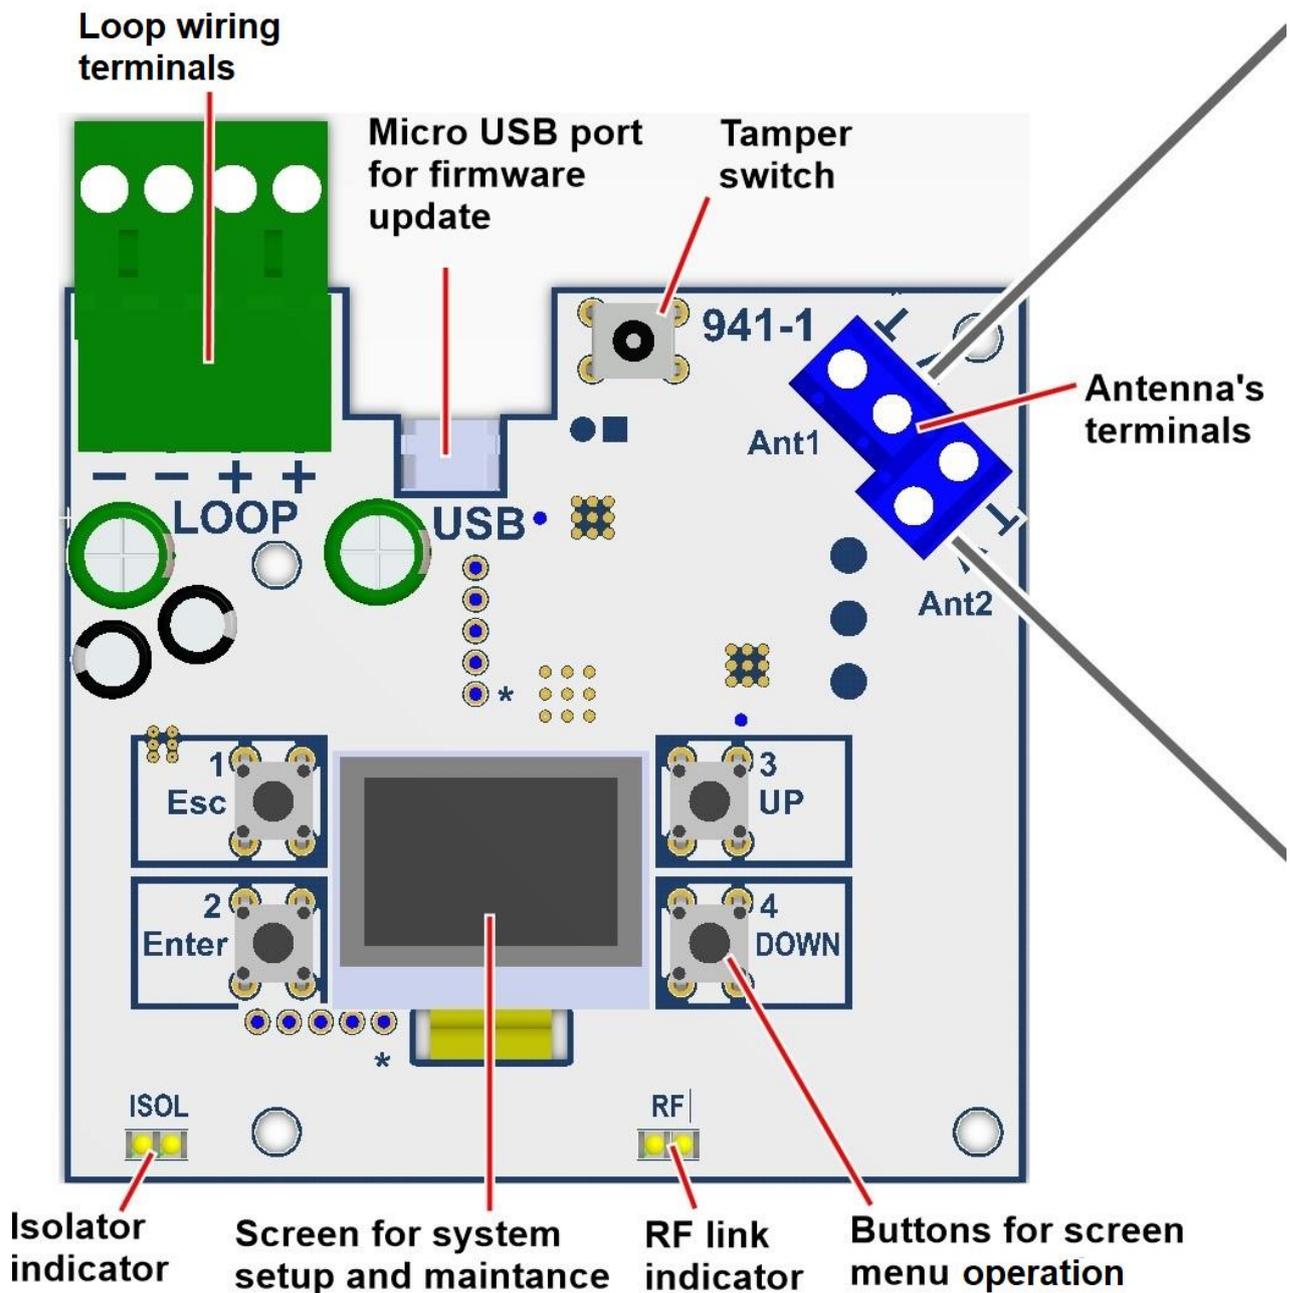

LOOP WIRING TERMINAL BLOCKS: Used for connecting the translator to the analogue loop

DISPLAY: Used for configuring the wireless system

	EK-WL8-TRH/AU WIRELESS TRANSLATOR MODULE	
STFV.425551.070-AU-UM rev. 8	20.07.2021	Page 8 of 23

Micro USB PORT: Used for updating the firmware with a computer via a micro-USB cable and for connecting to the “Ekho Configuration” software.

ANTENNA TERMINAL BLOCKS: Can be used to replace the built-in antennas with a third party external antenna. In order to do that, please remove the existing antennas and insert coaxial cables from the external 868 MHz antennas (connect the central conductor to socket "A").

NOTE: The use of External antenna's is at the installers/users risk.

TAMPER: When the cover is opened, a "Fault" event is generated, this can be disabled/enabled via the Ekho Configuration software or the translator menu.

"ESCAPE/[1]" BUTTON: Used to exit from a menu or a sub-menu if the user doesn't want to apply the changes. A second function of this button is to be used as a digit "1" for the pass code .

"ENTER/[2]" BUTTON: Used to select a menu or a sub-menu; confirming the changes made to any parameters. A second function of this button is to be used as a digit "2" for the pass code.

"UP/[3]" BUTTON: Used for navigating through menus or sub-menus; changing the parameters (as a value increase). A second function of this button is to be used as a digit "3" for the pass code.

"DOWN/[4]" BUTTON: Used for navigating through menus or sub-menus; changing the parameters (as a value decrease). A second function of this button is to be used as a digit "4" for the pass code.

ISOLATOR indicator: Green LED on: loop is normal and isolator is closed, yellow LED on: short-circuit on the loop and the isolator is open.

RF indicator: Operates only if the translator is in expander mode. The green LED indicates that the RF connection with the central node (other translators) is present, the yellow LED indicates that RF connection with central node is lost.

	EK-WL8-TRH/AU WIRELESS TRANSLATOR MODULE	
STFV.425551.070-AU-UM rev. 8	20.07.2021	Page 9 of 23

INSTALLATION

Avoid installing the translator close to:

- equipment that uses large amounts of electrical current
- large metal objects, structures or metal ceiling structures
- fluorescent lighting fixtures
- computers, and their peripheral and network cabling.


If there are other translators or wireless system expander modules, a distance of at least 2 meters should be kept between them. In general, all wireless devices (devices included) should be installed at least 2 meters apart from each other.

It is recommended to install the translator and expanders at least 2 - 2.5 meters from the floor.

Environmental conditions (temperature, humidity etc.) must be in the ranges specified at the beginning of this manual.


After having installed the translator, make sure that the translator's devices (sensors, call points, etc.) are receiving a good, strong signal (refer to the individual device manuals) at their installed location.

Install the translator module using screws, fixing point information is shown below:

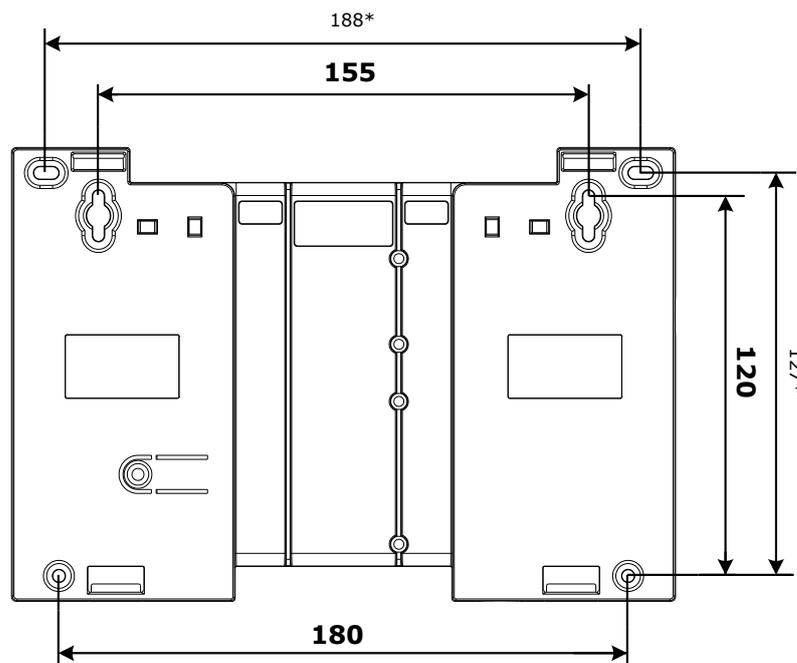


SYSTEM TOPOGRAPHY

There is one Ekho translator on a loop

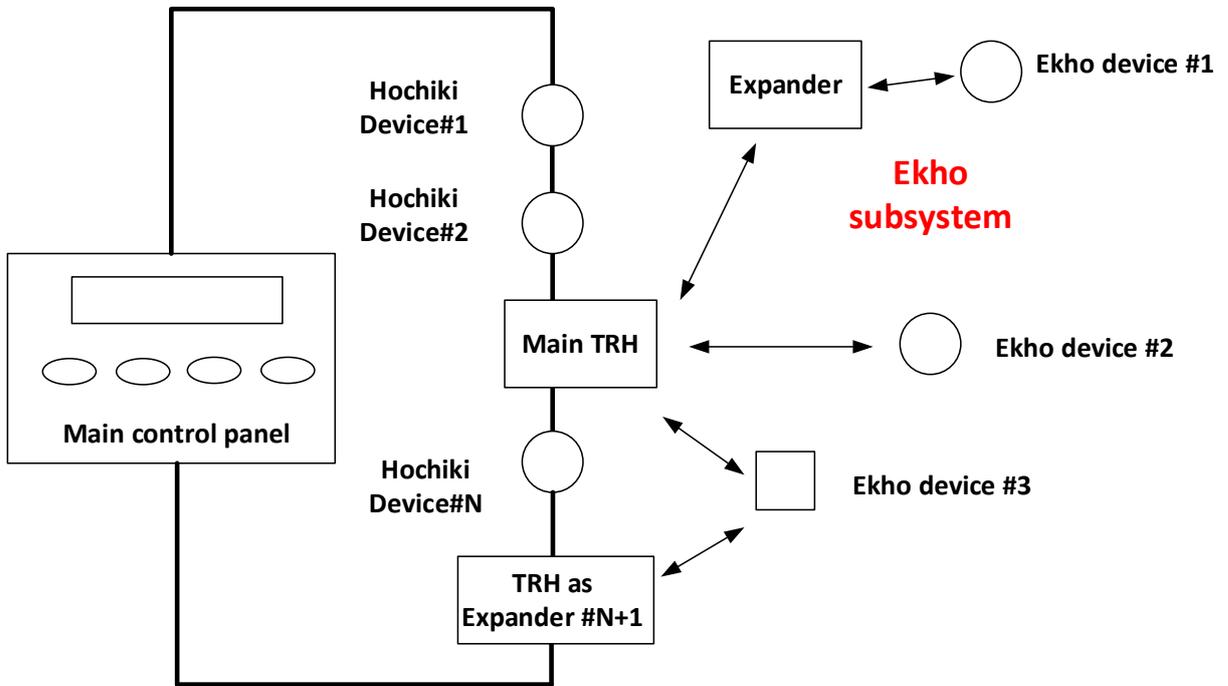

There are two Ekho translators on a loop

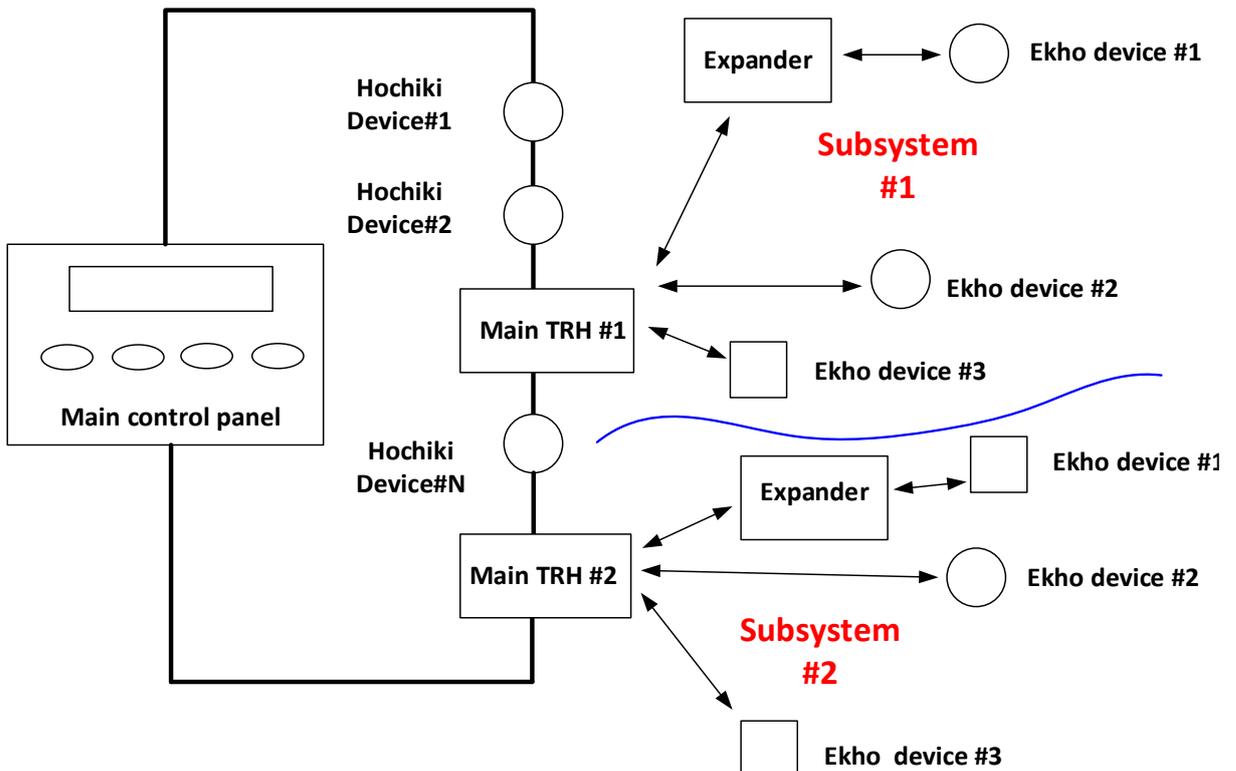

WIRING


TRANSLATOR WIRING

Before wiring the device, please consider the following:

- refer to and follow national codes of wiring and cabling practice and other internationally recognized standards
- loop terminals are polarity sensitive

Connect the loop wiring to the translator's terminal blocks as per the wiring scheme in the following picture and table.

NOTE It's recommended not to install more than 10 translators on to a single loop

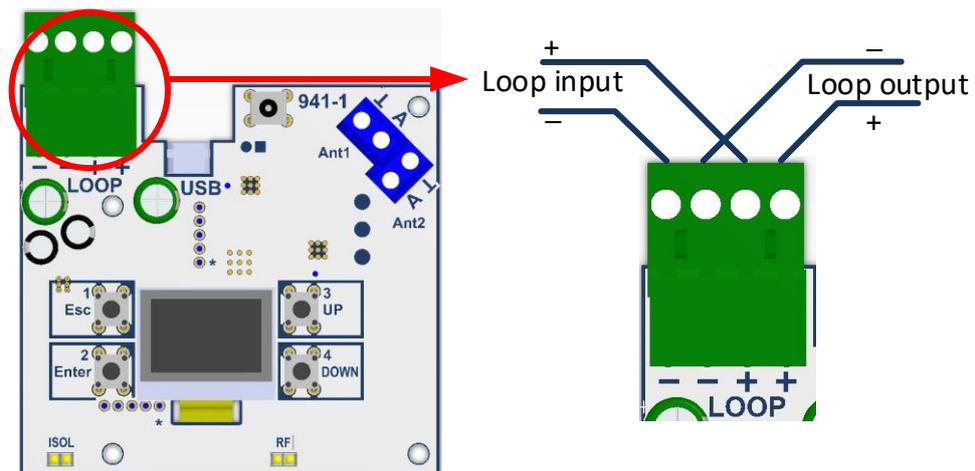

Picture 6

Terminal	Function	Description	Comment
1	Loop – in	Loop negative in	
2	Loop – out	Loop negative out	
3	Loop + in	Loop positive in	Short circuit protected
4	Loop + out	Loop positive out	Short circuit protected

SHORT CIRCUIT ISOLATORS

The translator incorporates an integral short circuit isolator.

	EK-WL8-TRH/AU WIRELESS TRANSLATOR MODULE	
STFV.425551.070-AU-UM rev. 8	20.07.2021	Page 12 of 23

FINAL STEPS OF INSTALLATION

Configure the radio system either directly with the translator's keyboard/display or with a personal computer. System configuration and programming will be described further in this manual.

PROGRAMMING

ACCESS PERMISSION


To access the "Configuration" menu a pass code needs to be entered (default password- "33333"). It is possible to change the default pass code by entering the "PSW Change" sub-menu which can be found in "Configuration"/"PSW Change". To do this you should enter the Current pass code twice and then the new pass code.

NOTE If the pass code is forgotten a factory reset (This action will erase any program configuration) of the system will need to be performed. To do this you should simultaneously press and hold button 1 and 3 and power cycle the translator. The display will show "Clear all?". Select "Yes", the system will be reset and the default pass code ("33333") can then be used.

ekho	EK-WL8-TRH/AU WIRELESS TRANSLATOR MODULE	
STFV.425551.070-AU-UM rev. 8	20.07.2021	Page 13 of 23

CREATING A NEW SYSTEM


Firstly, a central node(s) (Main TRH) should be created.

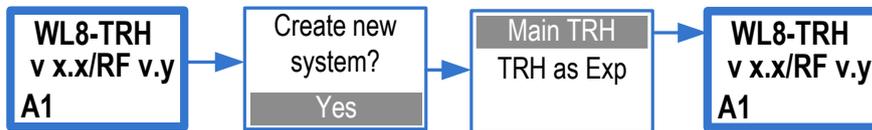


The loop address will also need to be changed.

Once completed an additional TRH as expander can be added to the system.

STEP1 – add TRH as expander to main TRH configuration

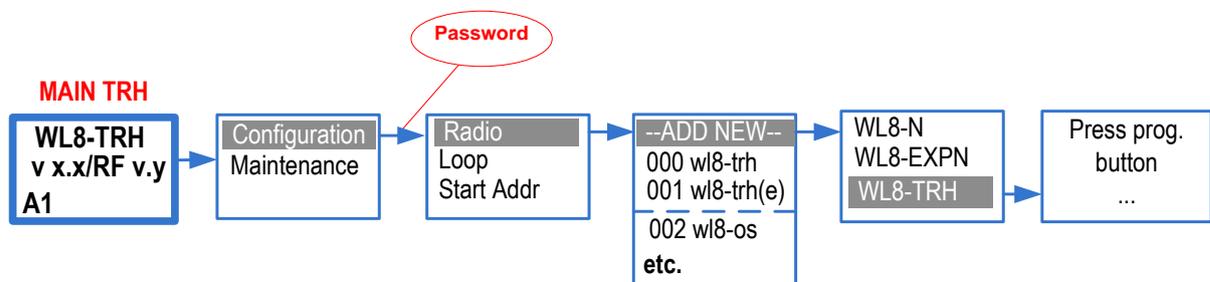

STEP2- initialize TRH as expander in the system

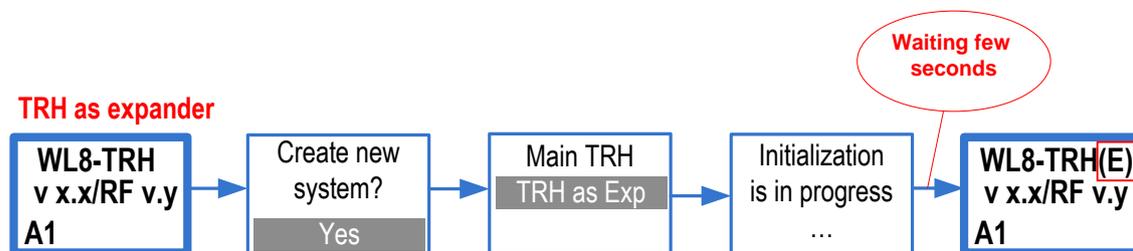


STEP3 – make sure the following message appears on Main TRH display



STEP4 – change the loop address for TRH and TRH as expander via the menu

CHOOSING THE RADIO PROTOCOL TYPE

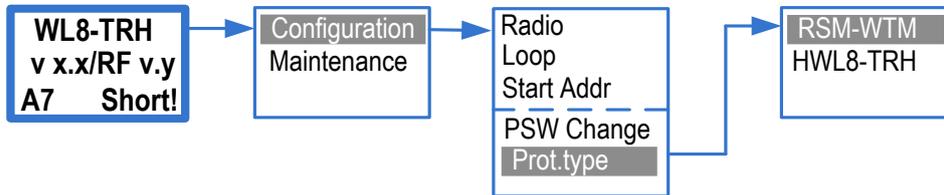


The default protocol type is RSM-WTM. HWL8-TRH protocol type is reserved for future use.

ADD/DEL DEVICES

The following steps describe the common procedures for adding or deleting the devices from the wireless system.


1. The ADD command procedure is performed in the following way:

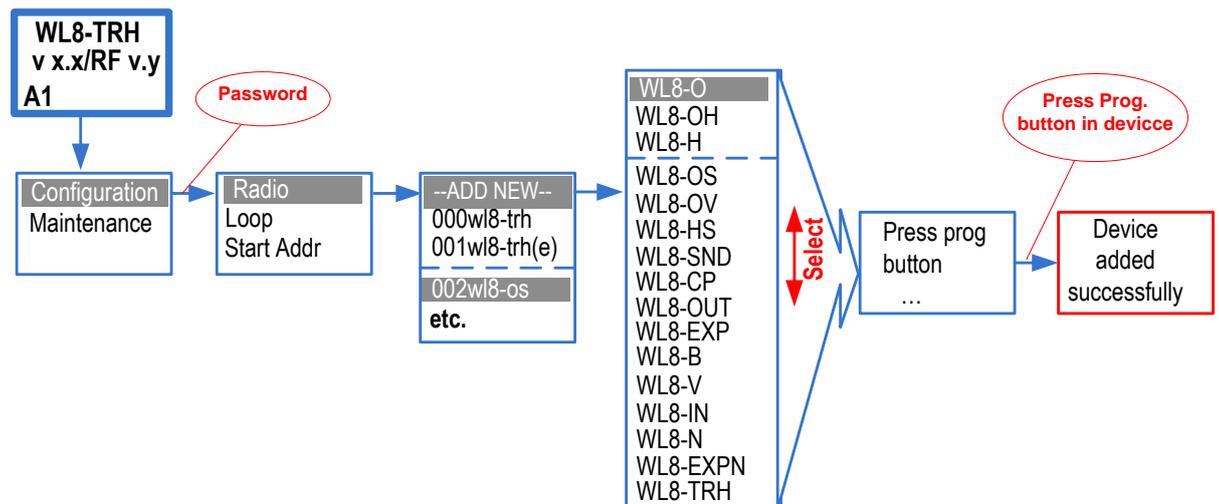

After the ADD command is performed, the translator waits for a device to be linked, to link a device press the device's "program button" (see the specific installation manuals of these devices).

After a device has been linked the translator automatically assigns a subsequent address to this device. The whole sequence starts from the address assigned to the translator ("Start Addr" menu option).


2. The following picture describes the DEL ("delete") command procedure, which can be applied to devices that are already present in the wireless configuration:

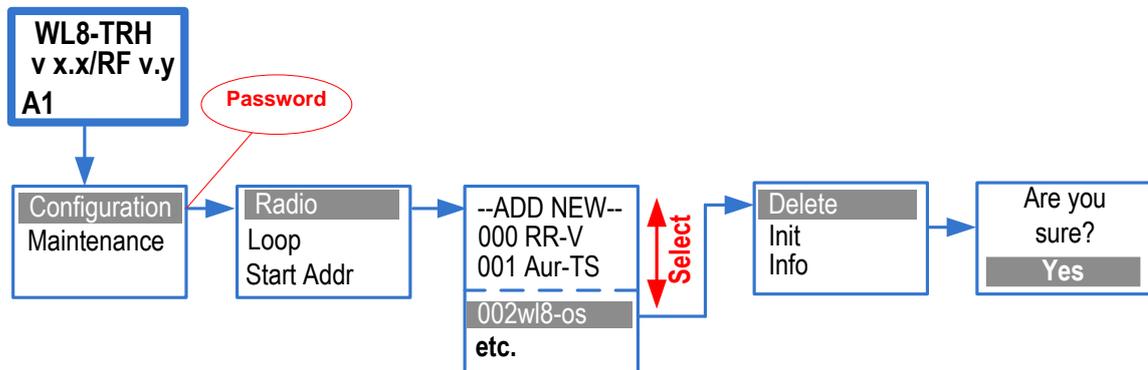


Be aware that this command deletes a device from the configuration of the translator, but not from the configuration of the main control panel.

CHANGING THE START ADDRESS OF THE TRANSLATOR


Upper display menu

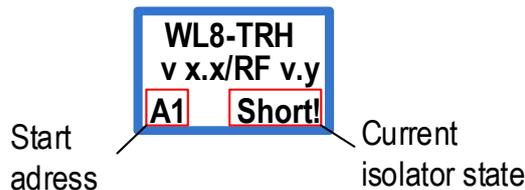

If the wired ESP loop has devices connected (for example, addresses 1 to 19 are occupied), you must change the start address (available from 1 to 127) to connect the following (wireless) devices:

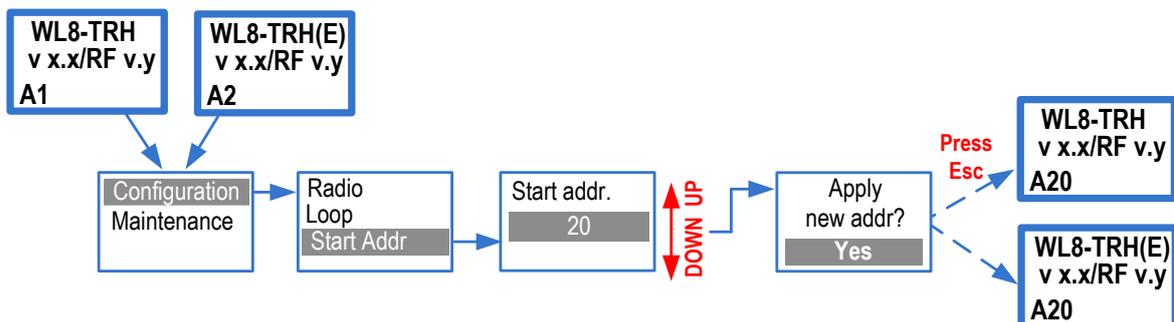


Confirmation that the correct address has been applied can be checked

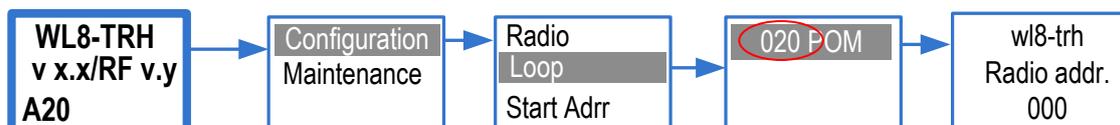

ADDRESSES CROSS-MAPPING

The Loop menu is used to display information regarding the entire address table that the translator provides to the Hochiki ESP loop. It is also possible to view the mapping between the Hochiki ESP loop devices and the radio addresses.

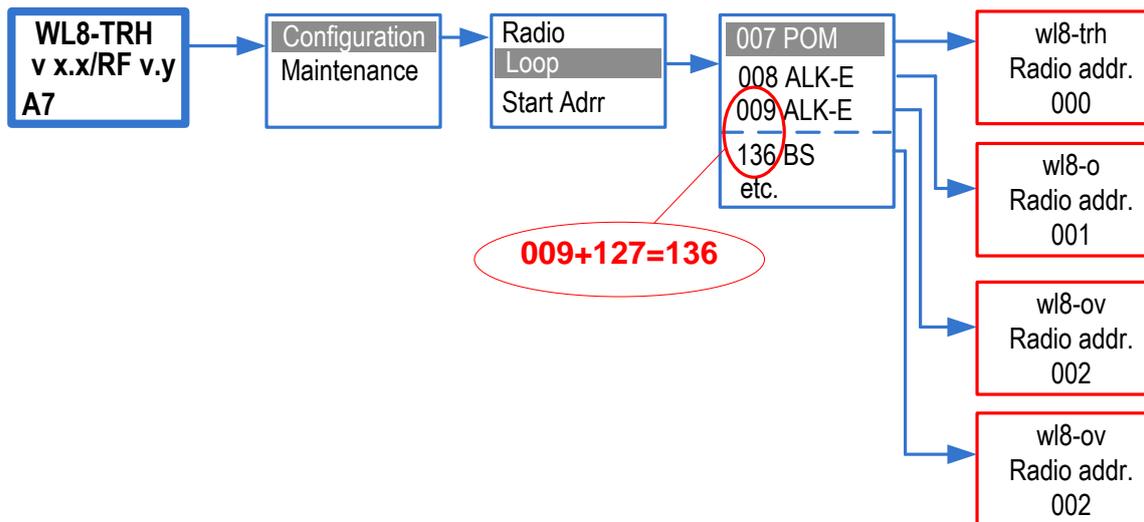


EKHO DEVICES AND ESP DEVICES TYPES

The actual ESP device(s) emulated by the translator on behalf of a EKHO device will be as per the following table:

Wireless EKHO Device	ESP Device type
EK-WL8-TRH Hochiki Wireless Translator Module	CHQ-POM
EK-WL8-CP Wireless MCP	HCP-E
EK-WL8-O Wireless Optical Smoke Sensor	ALK-AS/ASN
EK-WL8-OH Wireless Multi-Sensor Sensor	ACB-ASN
EK-WL8-H Wireless Heat Sensor A1R	ACB-ASN
EK-WL8-OS Wireless Optical Smoke Sensor with Built in Sounder	ALK-AS/ASN (Sensor) CHQ-BS (Sounder)
EK-WL8-HS Wireless Heat A1R Sensor with Built in Sounder	ACB-ASN (Sensor) CHQ-BS (Sounder)
EK-WL8-IN Wireless Single Input Module	CHQ-S / CHQ-DIM
EK-WL8-OUT Wireless Single Output Module	CHQ-SIO/CHQ-MRC
EK-WL8-OV Wireless Optical Smoke Sensor with Built in Voice Annunciator and VID	ALK-AS/ASN (Sensor) CHQ-BS (Voice)
EK-WL8-SND Wireless Sounder	CHQ-BS
EK-WL8-EXP Wireless Expander Module	CHQ-POM

You can also view the address(es) occupied by every radio device:

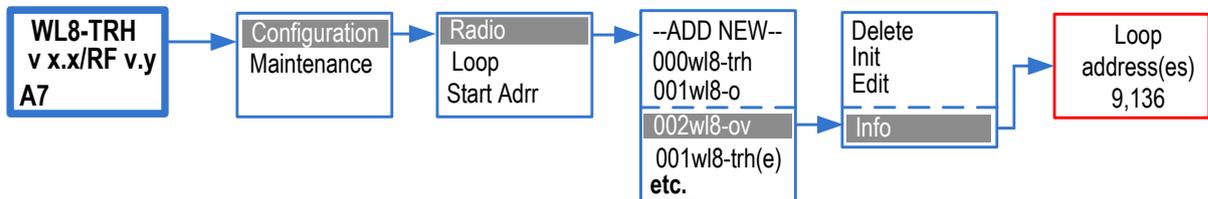

Devices that combine fire sensors and sounders (for example, EK-WL8-OS, EK-WL8-HS, EK-WL8-OV etc.) occupy two addresses on the ESP loop. The sounder within these devices will be addressed automatically by adding 127 to the sensor address and then using this number as the sounder address e.g. 9 (sensor address)+127=136 (sounder address).

When you add a new wireless device, it is added at the end of the list by default.

When you delete a wireless device, the list shifts up automatically.


Example of wireless device deleting:

Radio address	Radio Device	Loop address before deleting	Loop address after deleting
000	WL8-TRH	007	007
001	WL8-O	008	008
002	WL8-OV	009	-
		136	-
003	WL8-IN	010	009
001	WL8-TRH(E)	Unknown	Unknown
etc.		etc.	etc.

NOTE WL8-TRH(E) radio address will be the same as some wireless device addresses. This is normal as the radio address space for expanders differs from other wireless devices address space.

PARAMETER EDITING

The basic parameters of the EKHO devices have the option to be changed e.g. On/Off. Some parameters are not obvious, for example the EK-WL8-TRH parameters.

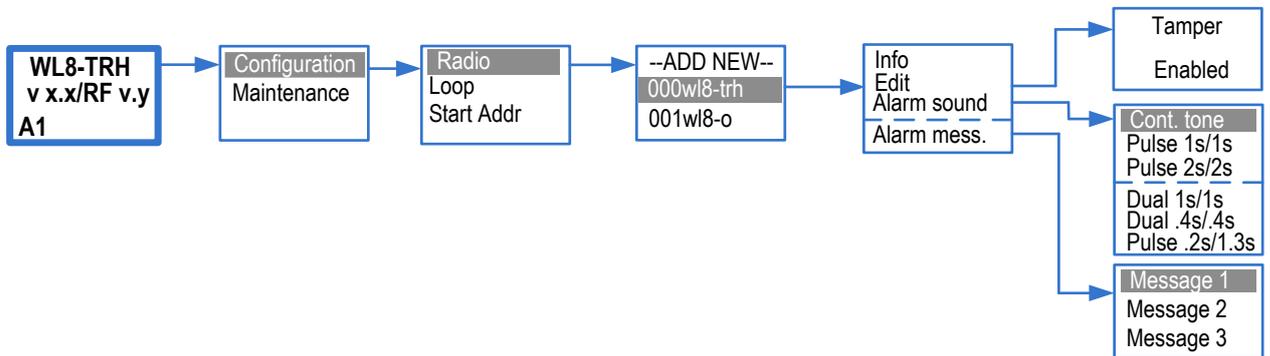

Parameter	Value	Description	
Alarm sound	Cont. tone	Tone that is used when the sounder is operated from a fire condition	Continuous one tone
	Pulse 1s/1s		1s –ON /1s-OFF
	Pulse 2s/2s		2s –ON /2s-OFF
	Dual 1s/1s		1s –ON Tone1 /1s-ON Tone2
	Dual .4s/.4s		0,4s –ON Tone1 /0,4s-ON Tone2
	Pulse .2s/1.3s		0,2s –ON /1,3s-OFF
Alarm mess.	Message 1	List of pre-recorded voice messages in the voice annunciator (WL8-OV) that can be played in a fire condition	
	Message 2		
	Message 3		

NOTE The tone frequency depends on the type of sounder being used and is shown in the sounder and combined devices user manuals.

Operation mode of all sounders in a fire condition is selected in the settings of the WL8-TRH (menu: Alarm sound)


Tones selectable via the DIP switches:-

Sound alarm parameter	Switches condition on WL8-SND PCB (LEFT-RIGHT)			
	1(OFF) - 1(OFF)	1(OFF) - ON	ON – 1 (OFF)	ON - ON
Cont. tone	Continuous tone 990Hz	Continuous tone 990Hz	Unsynchronized Dual tone 990Hz&650Hz (250ms~250ms)	Unsynchronized Pulsed tone 990Hz (500ms On/500ms Off)
Pulse 1s/1s	Pulsed tone (synchronized) 990Hz (1s On/1s Off)			
Pulse 2s/2s				
Dual 1s/1s				
Dual .4s/.4s				
Pulse .2s/1.3s				

	EK-WL8-TRH/AU WIRELESS TRANSLATOR MODULE	
STFV.425551.070-AU-UM rev. 8	20.07.2021	Page 19 of 23

MAINTENANCE

Maintenance menu (not for WL8-TRH(E)) allows you to view the state of wireless devices and send control commands:

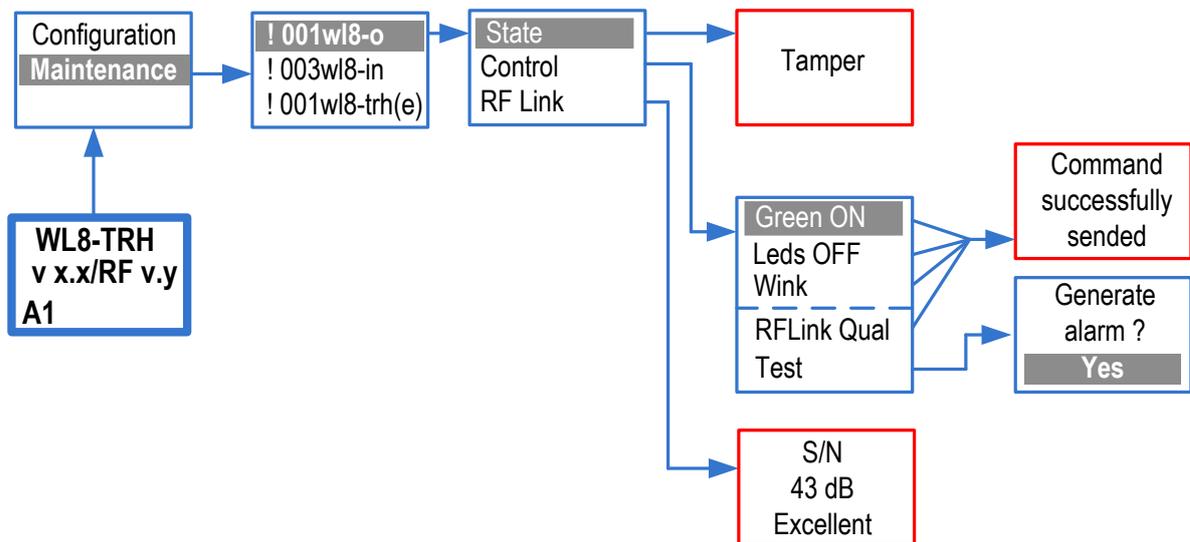

"!" at the beginning of the line means that there is a problem with a wireless device. By using the "State" menu, a user can obtain information about the general state (alarm/no alarm) and all current fault conditions of the device. Use the "UP" and "DOWN" buttons to scroll through the faults list.

NOTE After battery replacement in a child device wait at least 5 minutes for any unexpected fault messages to disappear.

By using the "Control" menu you can turn the device's LED on or off and activate the "RF link Quality" mode. For sensors, it's also possible to generate an alarm of the system.

In the "RF link Quality" mode, devices indicate their signal strength with the wireless expander via a flashing LED:

- 2 flashes RED – no connection
- 1 flash RED – poor signal strength
- 1 flash GREEN – good signal strength
- 2 flashes GREEN – excellent signal strength

Devices automatically exit the "RF Link Quality" mode after 15 minutes.

	EK-WL8-TRH/AU WIRELESS TRANSLATOR MODULE	
STFV.425551.070-AU-UM rev. 8	20.07.2021	Page 20 of 23

In the "RF Link" mode the WL8-TRH displays the link quality with the selected device refer to the table below:

Wireless signal quality (S/N)	Assessment
< 10 dB	Bad (no connection)
10 – 24 dB	Weak
25 – 35 dB	Good
> 35 dB	Excellent

NOTE After installation the signal strength should indicate 'good' or 'excellent'.

WARRANTY

All translators are covered by a 3 year limited warranty. The warranty is voided by mechanical or electrical damage caused by incorrect handling or usage. Translator must be returned via an authorized supplier for repair or replacement along with full information on the identified problem.

WARNINGS & LIMITATIONS

Devices use high quality electronic components and plastic materials that are highly resistant to environmental deterioration. However, after 10 years continuous operation it is advisable to replace them to reduce the risk of reduced performance caused by external factors. Ensure the devices are only used with compatible control panels. Detection systems must be checked, serviced and maintained on a regular basis to confirm correct operation.

Refer to and follow National Codes of Practice and other internationally recognized fire engineering standards. Appropriate Risk Assessment should be carried out initially to determine correct design criteria and updated periodically.

	EK-WL8-TRH/AU WIRELESS TRANSLATOR MODULE	
STFV.425551.070-AU-UM rev. 8	20.07.2021	Page 22 of 23

NOTE Each radio device has some individual parameters which are not described here. For further detail please refer to the individual product specifications.

	EK-WL8-TRH/AU WIRELESS TRANSLATOR MODULE	
STFV.425551.070-AU-UM rev. 8	20.07.2021	Page 23 of 23

 <p data-bbox="172 2022 359 2139"> Australian Standard SAI Global Lic SMK 41078 </p>  <p data-bbox="427 2087 619 2139"> ABN No 67 153 750 648 </p>	<p data-bbox="799 1803 1406 1966"> Hochiki Australia Pty Ltd Block Y, Unit 1 Regents Park Estate 391 Park Rd, Regents Park NSW 2143, Australia </p> <p data-bbox="799 2018 1382 2139"> Telephone: +61 2 9738 5566 Web: www.hochikiaustralia.com Email: sales@hochikiaustralia.com </p>
--	--